



SUPPLEMENTARY MANUAL

for ESE-H01

REMOVE THE MAIN SEAT.



REMOVE BLACK COVERS
FROM INTAKE AIRBOX.
LIFT UP OR REMOVE THE
FUEL TANK.
REMOVE THE MIDDLE FAIRING FROM
LEFT SIDE.



UNPLUG THE
EXHAUST SERVO-MOTOR
CONNECTORS.
(TRANSPARENT, 6-POLE CONNECTOR
IN DUST BOOT BELOW FUEL TANK)



Honda CBR900RR

2002-2003



REMOVE EXHAUST SERVO-MOTOR.
(LEFT SIDE BELOW FUEL TANK)



**PLUG ESE CONNECTOR TO
EXHAUST SERVO-MOTOR
CONNECTOR.**



**TYPICAL POSITION
FOR EXHAUST SERVO ELIMINATOR.**

