





SUPPLEMENTARY MANUAL

for ESE-K01


**REMOVE THE BLACK FRAME COVERS
BELOW MAIN SEAT.
REMOVE THE MAIN SEAT.**

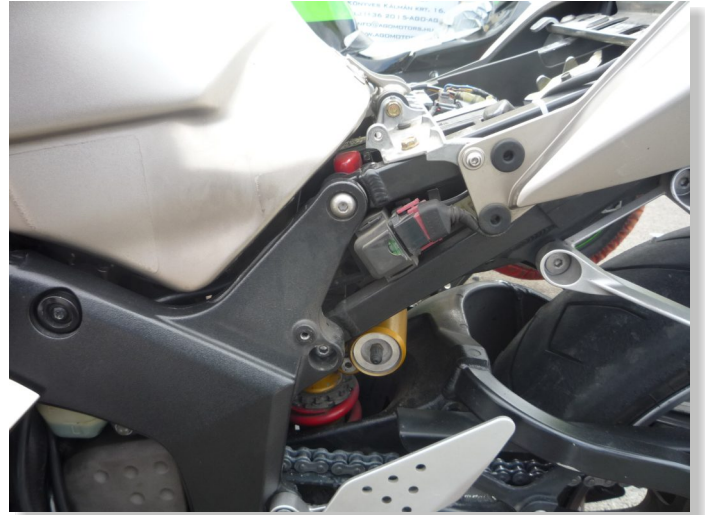

**REMOVE EXHAUST SERVO-MOTOR.
(BELOW MAIN SEAT)**

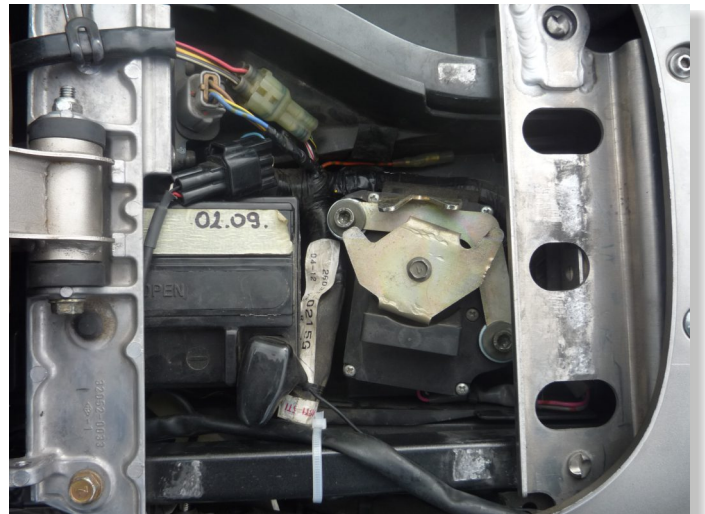

**UNPLUG THE
EXHAUST SERVO-MOTOR
CONNECTORS.
(WHITE, 3-POLE TRIANGULAR AND WHITE, 2-POLE
CONNECTORS BELOW MAIN SEAT)**

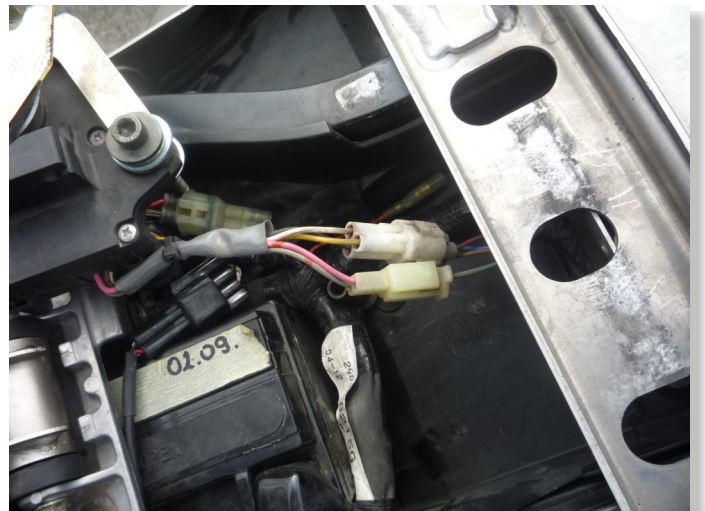

Kawasaki ZX-6RR

2005-2006



PLUG ESE CONNECTORS TO
EXHAUST SERVO-MOTOR
CONNECTORS.



TYPICAL POSITION
FOR EXHAUST SERVO ELIMINATOR.

