




Installation Instructions

60-0339RB Cover Protector

- 1) Remove the three OEM bolts from the bottom of the clutch cover.
- 2) Attach the skid plate to the Woodcraft cover by bolting it from the inside.

IMPORTANT - USE THREADLOCKING COMPOUND ON THE THREE SKID PLATE MOUNTING BOLTS. Coat the threads completely and allow the threadlocking compound to fully set before use.

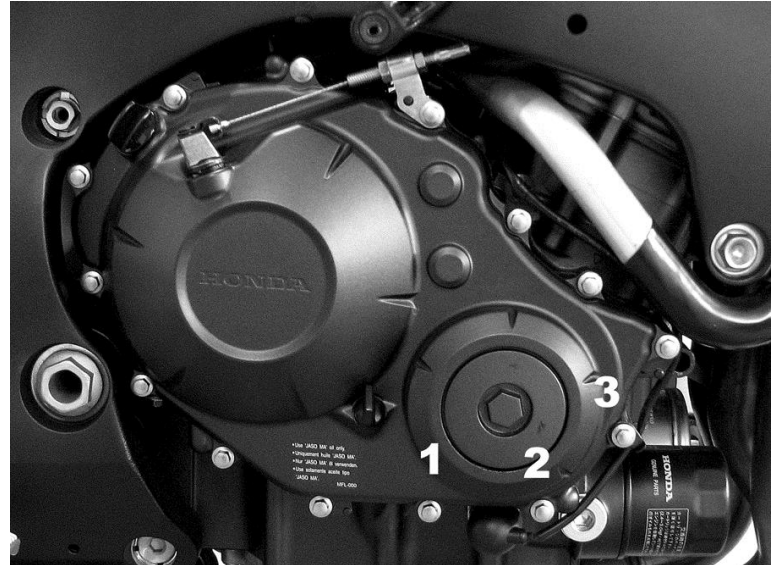

- 3) The 60-2500 rubber pad should be adhered to the back side of the cover.
- 4) Install the Woodcraft cover over the OEM Honda cover with the included Woodcraft mounting hardware. **The included spacer goes between the cover and the #1 mounting bolt in the photograph.** Use the following information to identify the proper bolts: The #1 bolt is 45mm long, the #2 bolt is 40mm long, and the #3 bolt is 35mm long. Torque for these mounting bolts is about 8 ft-lbs.
- 5) Start the motorcycle and inspect for any leaks before riding.

WARNING

Installation of Woodcraft Billet Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. **FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.**